 
 


RDPSD SECURITY SYSTEM FIRE RESET PROCEDURE

1. Press and hold the # button for 4 seconds then release, the keypad will beep and display “Enter Your Access Code”

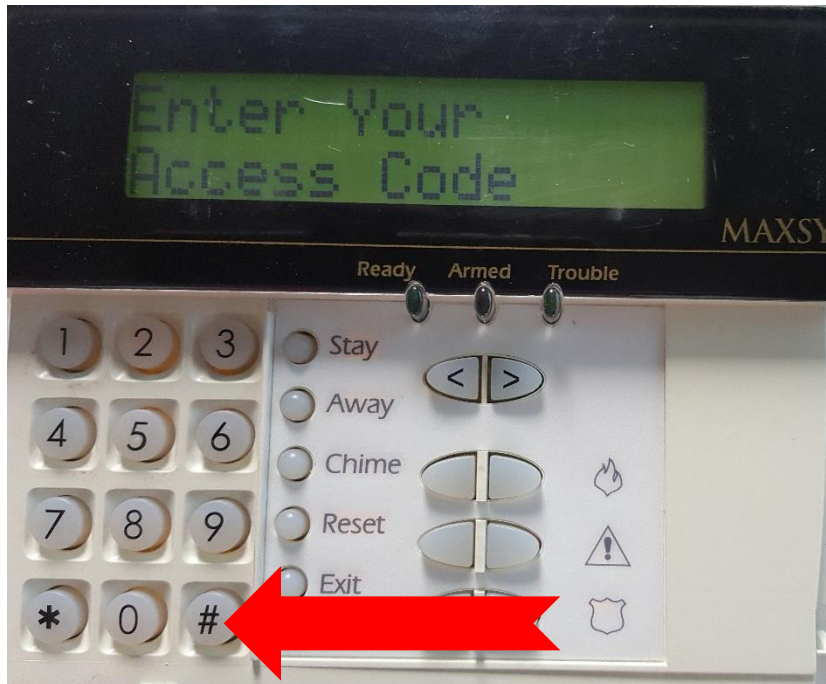

2. Enter the 4 digit FIRE ALARM RESET CODE (7777). Use the arrow key to scroll through to “For Other Options” and press *

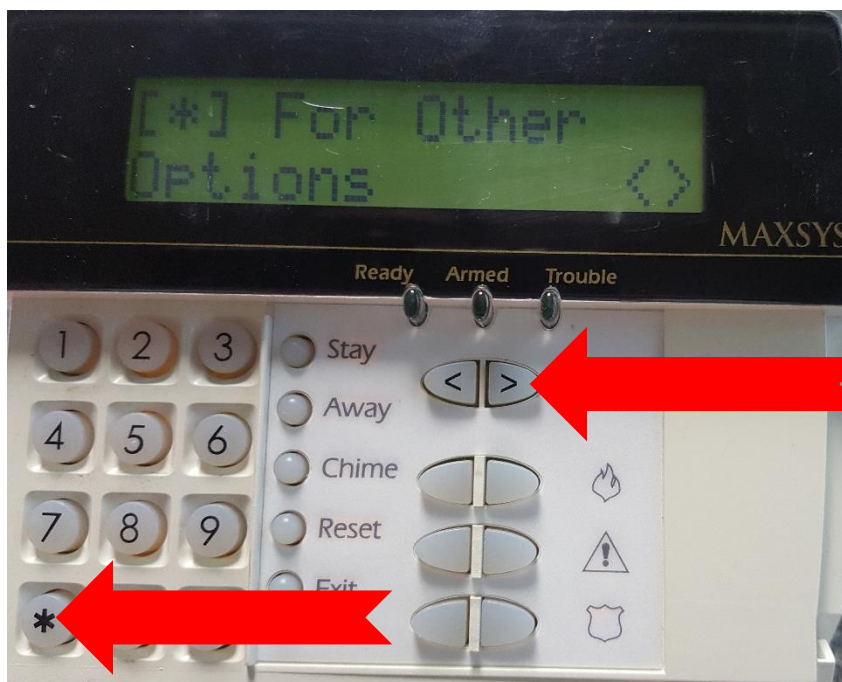

RDPSD SECURITY SYSTEM FIRE RESET PROCEDURE


3. The keypad will display “Accessing FIRE SYSTEM”



4. The keypad will display “Enter Your Access Code”.

Enter the 4 digit FIRE ALARM RESET code (7777).

(Note: the keypad may display the message “First Fire Alarm FIRE ALARM”.
disregard and continue with these instructions)

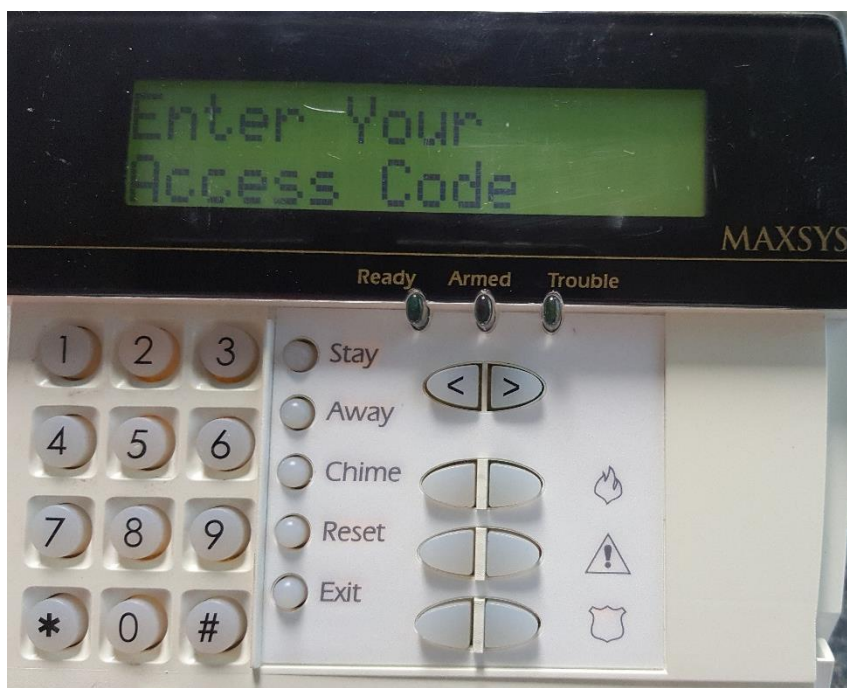

RDPSD SECURITY SYSTEM FIRE RESET PROCEDURE

5. The keypad will display “Secure System Before Arming”




6. Enter the 4 digit FIRE ALARM RESET code (7777).
The keypad will display “Command Output 2”
followed by “Fire Zones Were Reset”



RDPSD SECURITY SYSTEM FIRE RESET PROCEDURE

7. The green ready light will turn on and the keypad will display the time and date press the # button twice.

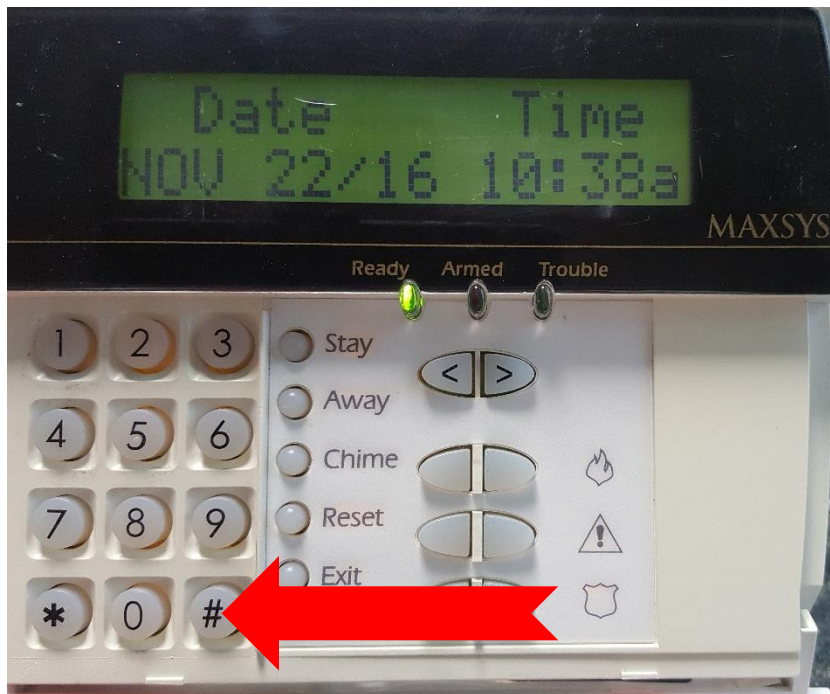

8. The fire zones on the security system have now been reset.